












CALIBRATION

- 1) Press  key to turn on the scale.
- 2) Press  key during that start up ,display will be show “*FO bL*”
- 3) Press  key until display show “*tECh*”

Before enter the tech parameter,it’s required to press the calibration switch, switch is locating below the scale

- 4) Press  key to confirm and display will be shown “*APPrOU*”
- 5) Press  key to select “*P I CAL*”
- 6) Press  key to confirm, display will be shown “*CAL Lb*”
- 7) Press  key to select “*CAL Lb*” or “*CAL tG*”
- 8) Press  key to confirm, display show “*UnLoAd*”
- 9) Press  key , display will be shown current calibration weight value,

If necessary press  key to shift location,press  key to change the value.

- 10) Press  key to confirm,display will be show “*LoAd*”
- 11) Place the test weight on the platter.
- 12) Once the stable indicator is shown on the display, press  key, display will be show “*PASS*” and come to normal weighing mode.

In case display will show any error message or incorrect measurement, repeat the calibration again.

Full Capacity

| Model # | Pounds test weights | Kilogram test weights |
|----------|---------------------|-----------------------|
| TPD-12lb | 12 lb | 6 kg |
| TPD-30lb | 30 lb | 12 kg |
| TPD-60lb | 60 lb | 30 kg |

