


Quick Reference

LP-1000N

Label Printing Scale

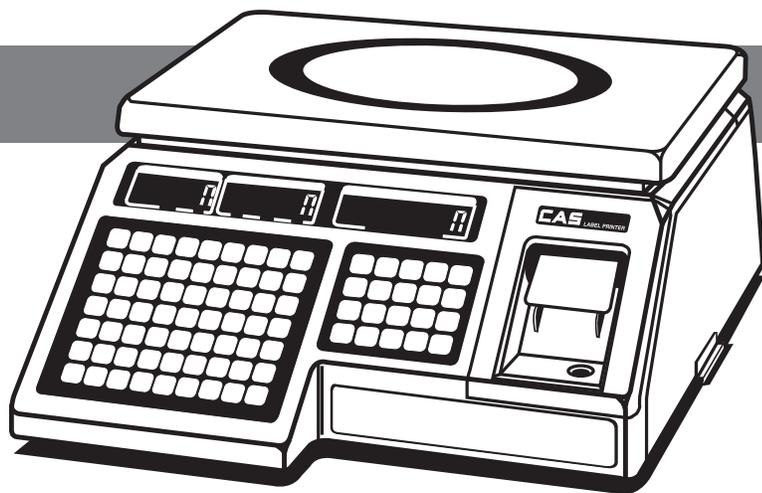

Ingredient Programming

A

1. Press **1** on the numeric keypad.
2. Press **MODE** on the alphanumeric keypad.
3. Press **AUTO** until the display shows 'mSG'.
4. Press **PRT/*** on the numeric keypad.

The display will show 'PLU'.



B

The display will show 'mSGno', a **number**, and '0'. The number in the unit price display is how many messages {ingredient} files are left. Key in the number {1-1000} of the message {ingredient file} you wish to edit or create. This number must be attached to the PLU that you wish to print. This is done as part of the PLU programming.

Press **PRT/***. The display will show 'Edit'.

Press **PRT/***. The display will show 'EntEr 01.01'.

The first number, '01' stands for line 1. The second number, '01' is how many characters have been programmed. This number will advance as you program characters. If you make a mistake,

← will delete the last character, while **C** in the numeric keypad will delete every character on every line. Use **←** or **→** to scroll through the characters that have been programmed.

You can program up to 50 characters per line on up to 8 lines for a total of 400 characters. Once you are done with one line, press **ENTER** or **↓** to go to the next line. When you are finished with all the programming for that message {ingredient}, press **PRT/*** and the display will show 'mSG'. If you wish to program more message {ingredient} files, repeat Step B or press **C** to return to the weigh mode.